

We suggest you tighten hex head bolt located on the left top of entrance door (see arrow for location). If bolt becomes loose it may damage the bearing on the top of the entrance door. You may want to remove the hex head bolt and install LocTite to prevent it from working loose.



We suggest you tighten hex head bolt located on the right top of entrance door (see arrow for location). If bolt becomes loose it may damage the bearing on the top of the entrance door. You may want to remove the hex head bolt and install LocTite to prevent it from working loose.

