

CHILD REMINDER SYSTEM

2002 MODEL FREIGHTLINER/THOMAS BUSES

CRS ELECTRONICS (CHILD REMINDER SYSTEM)

The Child Reminder System is armed once the 8-light warning system is activated. It remains armed until the ignition switch is turned off. The unit is programmed to give the operator 30-seconds to go to the rear of the bus to de-activate the system. If the operator does not go to the rear of the bus to de-activate within the 30-second period the horn will begin to blow. The following procedure should be followed to deactivate the Child Reminder System.

1. TURN IGNITION SWITCH OFF.
2. LEAVE ENTRANCE DOOR OPENING SWITCH (LOCATED IN SIDE ELECTRICAL PANEL NEXT TO 8-LIGHT ACTIVATION SWITCH) IN CLOSED POSITION.
3. GO TO REAR OF BUS AND CHECK FOR STUDENTS. ONCE YOU ARE AT THE REAR OF THE BUS, DEPRESS THE DE-ACTIVATION SWITCH (LOCATED OVER THE REAR DOOR HEADER). INTERIOR LIGHTS WILL BLINK TWO TIMES WHEN SYSTEM IS DE-ACTIVATED. THE INTERIOR LIGHTS WILL STAY ON AFTER THEY BLINK TWO TIMES AND PROVIDE LIGHT FOR OPERATOR TO GO BACK TO THE FRONT OF THE BUS.
4. PLACE THE AIR DOOR RELEASE HANDLE (LOCATED IN THE FRONT HEADER PANEL) IN THE EMERGENCY POSITION. THIS WILL ALLOW THE OPERATOR TO PUSH THE ENTRANCE DOORS OPEN AND EXIT THE BUS.