

**North Carolina Department of Public Instruction
Transportation Services Section**

Type-A Bus Preventive Maintenance Plan



Every 5000 Miles (5k, 10k, 15k...)

Change engine oil and filter (007)
Lube grease fittings/check fluids (007)
Lube door/hood hinges and latches (007)
Service battery (cable and comp.) (006)
Rotate Tires

Every 15000 Miles (15k, 30k, 60k...)

Replace fuel filters (003)
Inspect and service air filter (006)
Pressure test cooling system (006)
Inspect and adjust engine belts (006)
Test steering gear operation (006)
Check or reline front brakes (006)
Turn front brake rotors (if needed) (001)
Service wheel chair lift (006)
Road test (018)

Every 30000 Miles (30k, 60k, 90k...)

Inspect front wheel bearings (006)
Wash eng/bat compartment - Low Pressure
Check or reline rear brakes (006)
Turn rear brake drums (if needed) (001)
Inspect rear wheel bearings (006)
Check tension belt pulley (006)
Visually Check steering linkages (006)
Check front end alignment (006)
Check spring u-bolts (001)

Every 60000 Miles (60k, 120k, 180k...)

Change auto trans. filter & fluid (007)
Change Pwr steering fluid & filter (006)
Drain/rep. brake fluid (hydraulic) (007)
Drain/flush radiator (002)
Inspect and Repair Undercoating (015)

Every 90000 Miles (90k, 180k, 270k...)

Change differential fluid (007)
Tune up engine (Gas)(006)